

How to arm/disarm the Vista 20P:

CODE + 1	DISARM- OFF
CODE + 2	ARM- AWAY (Exit/Entry delays; Motions ON)
CODE + 3	ARM- STAY (Exit/Entry delays; Motions OFF)
CODE + 33	ARM-NIGHT STAY (Exit/Entry delays; Select Motions ON)
CODE + 4	ARM-MAXIMUM (Exit delay, NO entry delay; Motions ON)
CODE + 7	ARM- INSTANT (Exit delay, NO entry delay; Motions OFF)

How to change /add/delete codes on the Vista 20P:

How to change the master code:

Current Master Code + [8] + [02] + [New Master Code] [New Master Code]

How to add/change user codes:

Master Code + [8] + [user number to be added/changed] + [code to be added]
(04-32)

How to delete user codes:

Master Code + [8] + [user number to be deleted] + [#] [0]
(04-32)

How to add a duress code:

Step One:

Master Code + [8] + [user number to be added] + [code to be added]
(04-32)

Step Two:

Master code + [8] + [user number added in step one] + [#] [1] + [3]
(04-32)

After adding or deleting a user code:

1. Call the central station (314-725-2848) and let them know about the user added or deleted. This is important when the code being added or deleted is used as a passcode with the central station.
2. If the code being added is a **duress code**, the central station needs to be informed of that code, so that it can be set it up as a verbal duress code (code used when an intruder is present and you want to have the police dispatched without tipping him off).